


Main accessories

Three-phase busbar systems



PS1-2-0-65

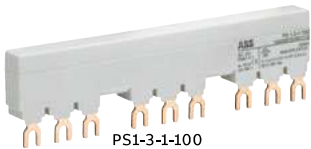

PS1-3-1-100



S1-M1-25



S1-M2-25



SA2



SA1



PB1-1-32



S1-PB1-25

Description

Three-phase busbars ensure a quick and safe connection and are therefore a cost effective solution. A variety of different three-phase busbars up to 100 A are in the assortment. Between 2 and 5 manual motor starters with none, one or two lateral auxiliary contacts can be connected. Different three-phase feeder terminals are available according to the application. Phase connecting links and phase power infeed blocks are also available for single-phase applications.

Ordering details

Suitable for	Rated operational current	Number of MMS	Number of lateral aux.	Factory code	Order code	
A						
Three-phase busbars						
MS116, MS132	65	2	0	1SAM201906R1102	PS1-2-0-65	
	65	3	0	1SAM201906R1103	PS1-3-0-65	
	65	4	0	1SAM201906R1104	PS1-4-0-65	
	65	5	0	1SAM201906R1105	PS1-5-0-65	
	65	2	1	1SAM201906R1112	PS1-2-1-65	
	65	3	1	1SAM201906R1113	PS1-3-1-65	
	65	4	1	1SAM201906R1114	PS1-4-1-65	
	65	5	1	1SAM201906R1115	PS1-5-1-65	
	65	2	2	1SAM201906R1122	PS1-2-2-65	
	65	3	2	1SAM201906R1123	PS1-3-2-65	
	65	4	2	1SAM201906R1124	PS1-4-2-65	
	65	5	2	1SAM201906R1125	PS1-5-2-65	
	MS116, MS132	100	3	0	1SAM201916R1103	PS1-3-0-100
		100	4	0	1SAM201916R1104	PS1-4-0-100
		100	5	0	1SAM201916R1105	PS1-5-0-100
100		3	1	1SAM201916R1113	PS1-3-1-100	
100		4	1	1SAM201916R1114	PS1-4-1-100	
100		5	1	1SAM201916R1115	PS1-5-1-100	
100		3	2	1SAM201916R1123	PS1-3-2-100	

Suitable for	Rated operational current	Rated cross section	Mounting form	Factory code	Order code
A					
Three-phase feeder terminals					
MS116, MS132	65	25	Flat	1SAM201907R1101	S1-M1-25
	65	25	High	1SAM201907R1102	S1-M2-25
	65	25	UL type E and IEC	1SAM201907R1103	S1-M3-25
	100	35	UL type E and IEC	1SAM201913R1103	S1-M3-35

Suitable for	Description	Factory code	Order code
MS116, MS132	Protection cover for busbars	1SAM201908R1001	BS1-3
MS116, MS132	Screw fixing kit	1SAM201909R1001	FS116
	Padlock + two keys	GJF1101903R0002	SA2
MS116	Lock handle	GJF1101903R0001	SA1
	Lock handle box SA1/SA2	GJF1101903R0003	SA3

Accessories for single-phase connection			
MS116, MS132	Phase connecting link	1SAM201914R1001	PB1-1-32
	Phase power infeed block	1SAM201914R1002	S1-PB1-25