


Moulded case circuit breakers

Electrical accessories

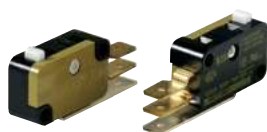

Undervoltage release – UVR

Uncabled versions.

Suitable type	Description	Order code
XT1...XT4	24-30V AC/DC	1SDA066389R1
	110-127V AC / 110-125V DC	1SDA066391R1
	220-240V AC / 220-250V DC	1SDA066392R1
T4...T6	24-30V AC/DC	1SDA054880R1
	110-120V AC/DC	1SDA054883R1
	220-240V AC / 220-250V DC	1SDA054884R1
T7-T7M	24V AC/DC	1SDA062087R1
	110-120V AC/DC	1SDA062091R1
	220-240V AC/DC	1SDA063552R1

Auxiliary contacts – AUX

Q, open/closed: indication of the position of the circuit-breaker power contacts.

SY, trip: signalling CB opening due to current release tripping (owing to overload or short-circuit), residual current device, the opening or undervoltage releases, the emergency push button of the motor, or owing to use of the test button.

Uncabled versions.

Suitable type	Description	Order code
XT1...XT4	1Q 24V DC	1SDA066423R1
Fixed or Plug-in	1Q+1SY 24V DC	1SDA066446R1
	1Q 250V AC/DC	1SDA066422R1
	1Q+1SY 250V AC	1SDA066431R1
T4...T6	1Q+1SY 250V AC/DC	1SDA051368R1
	3Q+1SY 250V AC/DC	1SDA051369R1
	3Q+1SY 24V DC	1SDA054914R1
T7	1Q+1SY 400V AC	1SDA062104R1
T7-T7M	2Q 400V AC	1SDA062102R1

T7-T7M available Auxiliary contacts combinations.

T7	SY	Q1			1Q + 1SY	T7M			Q2	Q3	2Q
			Q2	Q3	2Q		Q4	Q1			2Q
	SY	Q1	Q2	Q3	3Q + 1SY		Q4	Q1	Q2	Q3	4Q

Auxiliary contact for signaling trip coil release trip – S51

S51, trip unit tripping: indicates that one of the trip unit protection functions has tripped.

Uncabled versions. 250V AC versions.

Suitable type	Order code
XT2 and XT4	1SDA066424R1
T4...T6	1SDA055050R1
T7	1SDA062105R1
T7M	1SDA063553R1