

Data Sheet | Item Number: 211-821

Marker; for Smart Printer; for use in nozzles; Length: 23 mm; white

<https://www.wago.com/211-821>



Color: ■ white

Technical data

Marking method	Thermal transfer
Marking	plain
Delivery form	Roll
Delivery form configuration	2,500 markers/reel
Printing device	Smart Printer (thermal transfer printer)

Physical data

Depth	0.26 mm
Length	23 mm
Marking surface	4 x 23 mm

Mechanical data

Mounting type	Pushing in
Smear resistance	in conjunction with 258-5005 Ink Ribbon

Material data

Color	white
Material	Polyester
UV resistance	EN 60068-2-5:2010 Procedure B
Adhesive information	without adhesive
Halogen-free	Yes
Weight	204 g
Fire load	0 MJ

Environmental requirements	
Ambient temperature (storage)	+10 ... +22 °C
Ambient temperature (operation)	-20 ... +80 °C
Relative humidity	40 ... 50 %

Commercial data	
Product Group	2 (Terminal Block Accessories)
eCl@ss 10.0	27-40-04-01
eCl@ss 9.0	27-40-06-29
ETIM 9.0	EC001530
ETIM 8.0	EC001530
PU (SPU)	1 pcs
Packaging type	Box
Country of origin	DE
GTIN	4050821675006
Customs tariff number	39269097900

Environmental Product Compliance	
RoHS Compliance Status	Compliant, No Exemption

Downloads

Environmental Product Compliance

Compliance Search	
Environmental Product Compliance 211-821	↓

Documentation

Operating Instructions			
211-821 Information on printing material	1	pdf	1248.71 KB
	28.08.2020		↓

1 Compatible Products

1.1 Optional Accessories

1.1.1 Marking

1.1.1.1 Marking device



Item No.: 258-5000
 Thermal transfer printer; Smart Printer; for complete control cabinet marking; 300 dpi; With marking material

1.1.1.2 Marking sleeve



Item No.: 211-922

Nozzles; Length: 23 mm; For the use of 211-821; halogenated; Cable outer diameter: 1.5 ... 2.5 mm; transparent



Item No.: 211-926

Nozzles; Length: 23 mm; For the use of 211-821; halogenated; Cable outer diameter: 10.0 ... 14.0 mm; transparent



Item No.: 211-927

Nozzles; Length: 23 mm; For the use of 211-821; halogenated; Cable outer diameter: 14.0 ... 22.0 mm; transparent



Item No.: 211-923

Nozzles; Length: 23 mm; For the use of 211-821; halogenated; Cable outer diameter: 2.0 ... 4.0 mm; transparent



Item No.: 211-924

Nozzles; Length: 23 mm; For the use of 211-821; halogenated; Cable outer diameter: 4.0 ... 7.0 mm; transparent



Item No.: 211-925

Nozzles; Length: 23 mm; For the use of 211-821; halogenated; Cable outer diameter: 6.0 ... 10.0 mm; transparent



Item No.: 211-823

Nozzles; Length: 23 mm; For the use of 211-821; halogen-free; Cable outer diameter: 1.4 ... 5.0 mm; transparent



Item No.: 211-824

Nozzles; Length: 23 mm; For the use of 211-821; halogen-free; Cable outer diameter: 5.0 ... 11.0 mm; transparent



Item No.: 211-829

Nozzles; Length: 23 mm; For the use of 211-821; halogen-free; transparent

Installation Notes

Marking




Remove the printed marker from the reel.



Slide the marker into the marking sleeve receptacle. Replacing the marker is also possible after the conductor has been terminated.



Slide the marker through the marker slot up to the end of the sleeve.

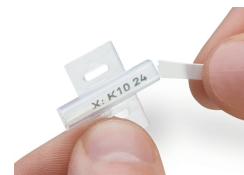

Then remove the rest of the card by twisting it off.